

INSTRUCTION - LAUNDRY

Brf Västerby



NOKAS

INSTRUCTION FOR ACCOMMODATION

Brf Västerby

Instruction Electrolux Vision

Select with the arrow keys as shown

Information> **Register**> **Log in**> **Language**


Read more information

For "**Read more**" you choose to select info.

Confirm with **OK**.

Select **BACK** to return.

(Swipe the card over the reader for personal information)

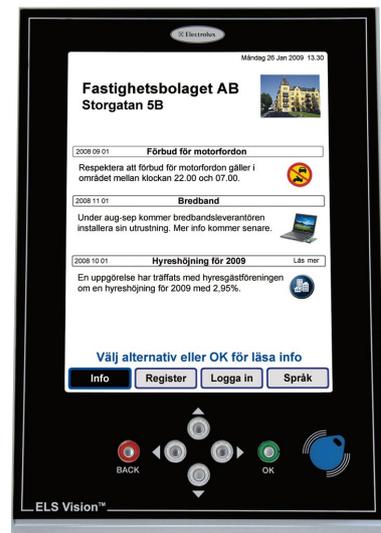

Booking

1. Swipe the card over the reader, Personal page is shown
"Select options or **OK, to reserve"**

2. Select Bookings, confirm with **OK**.
Default booking appears.
"Select what you would like to reserve press **OK"**

3. Select Bookings and confirm with **OK**.
Now show - calendar image with free and available times
"Select the day and time, Press **OK"**

4. Move selection (flashing blue frame) and select pass, confirm with **OK**.
Booking is complete when the picture with "**Booking OK**" is shown. Select **BACK** to return or log out



1,2



3



4

Cancellation

Swipe the access card over the reader, Select Cancel and confirm with **OK**.

Then select what you want to cancel, confirm with **OK**.

The cancellation is complete when the picture with "**Cancellation OK**" is shown.

Select **BACK** to return.