

INSTRUCTION - ACCESS SYSTEM

Brf Västerby



NOKAS

INSTRUCTION FOR ACCOMMODATION

Brf Västerby

Entry and Exit and LED

Left LED:

- **Green:** The door is unlocked
- **Red:** Access denied




Right LED:

Not in use

Offline-card reader

1. Present the access card in front of the reader.
2. When access is granted the door will unlock and a **Green** light will light up.
3. Push down the handle and open the door. The door locks automatically after 5 seconds.
4. Close the door behind you.

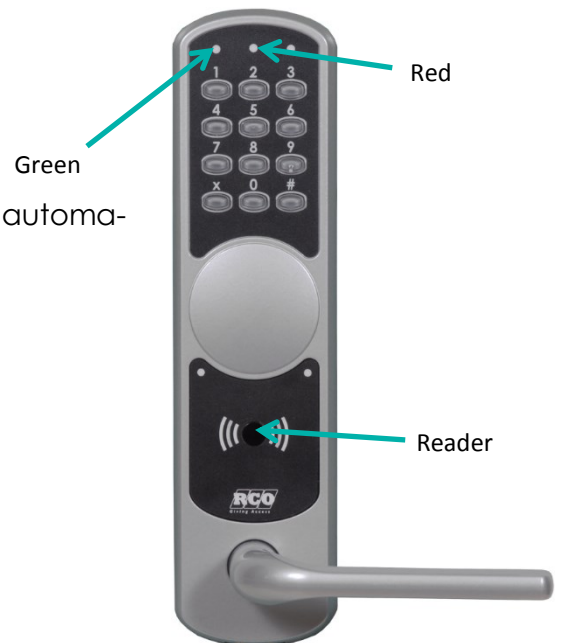

If access is not granted, a **Red** light flashes instead. Re-enter the card and try again.

If access is still not granted contact [system administrator].

From the inside, the door is usually opened by pushing down the handle.

If the card reader flashes **Red** after an approved passage, the battery level is low. Please contact [System Administrator].

INSTRUCTION FOR ACCOMMODATION

Brf Västerby

How To Use

Entry and Exit

Present the access card in front of the card reader

If you have access to the particular door, the text "Olåst" will appear



Initiation of your access card

Here's how to initiate your card so that it can be used to open offline doors:

1. Present your access card in front of the card reader
2. Keep it there for a few seconds as long as the lamp flicker.
3. If the LED light up, the door is unlocked. Open the door.



**håll kvar några sekunder
tills lampan slutar flimra**

