

INSTRUCTION FOR ACCOMMODATION

Brf Västerby



NOKAS

INSTRUCTION FOR ACCOMMODATION Brf Västerby

How To Use

Entry and Exit

Present the access card in front of the card reader

If you have access to the particular door, the text "Olåst" will appear

Call

Started dialing can be terminated at any time with **X**, regardless of the dialing option used.

Call, using the built-in register


1. Push any of the **SÖK**-buttons to turn on the backlight.
2. Scroll up or down to the person you want to call.

Alternatively, enter the first letter of the person's first or last name. Each key corresponds to 3 letters (eg d, e, f). Therefore, all names are displayed with initial letter corresponding to one of the button's letters (with the search letter selected).

If no key is pressed within 10 seconds, the display will power down and the task will be interrupted.

3. Scroll up or down to the person you want to call.
4. Push the **"RING"**-button. Dialing starts. The display shows:

- Ringer upp ...
- The name of the resident
- Floor number
- The resident's four-digit ID

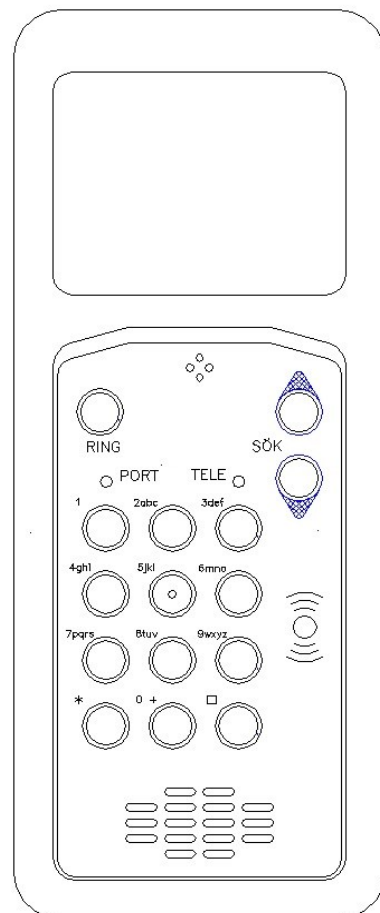

INSTRUCTION FOR ACCOMMODATION

Brf Västerby

Call, using the residents telephone number

1. Push the "**RING**"-button.
2. Enter the tenant's phone number. Dialing takes place.